1. Introduction

The common features of the EX-9033/33P,EX-9036/36P, EX-9015/15-M, and EX-9033-M/33P-M,EX-9036-M/36P-M modules are as follows:

- 1. 3000V DC inter-module isolation
- 2. 24-bit sigma-delta ADC to provide excellent accuracy
- 3. Direct RTD (resistance temperature detector) connection
- 4. Off-set value setting for individual channel
- 5. Support 2/3/4 wire(see wire connection on CD of EX9000 series or topsccc.com)
- 6. Break line detection
- 7. Modbus function

The EX-9033/33-M is a 3-channel RTD input module.

The EX-9033P/33P-M is a 3-channel RTD input module with individual channel configuration.

The EX-9036/36-M is a 6-channel RTD input module.

The EX-9036P/36P-M is a 6-channel RTD input module.

with individual channel configuration.

EX-9015/15-M is a 6-channel RTD input module.

with individual channel configuration.

Supported RTD types are as follows:

- 1. Platinum, 100 Ohms at 0°C, α = 0.00385
- 2. Platinum, 100 Ohms at 0°C, α = 0.003916
- 3. Platinum, 1000 Ohms at 0°C, α = 0.00385
- 4.Nickel, 120 Ohms at 0°C, α = 0.00672
- 5. Copper, 100 Ohms at 0°C, α = 0.00421
- 6. Copper, 1000 Ohms at 0°C, α = 0.00421
- 7. Copper, 100 Ohms at 25°C, α = 0.00427
- 8. Copper, 50 Ohms at 0°C
- 9. Nickel, 100 Ohms at 0°C





1.1 Specifications

	EX-9033/33-M	EX-9015/15-M
	EX-9033P/33P-M	EX-9036/36-M/36P/36P-M
Analog Input		
Input Channels	3	6
Input Type	2/3/4-wire RTD	Channel 0~2:2/3/4-wire RTD
		Channel 3~5:2/3-wire RTD
RTD Type	Pt100 α = 0.00385	$Pt100\alpha = 0.00385$
	$Pt100\alpha = 0.003916$	$Pt100\alpha = 0.003916$
	Ni120	Ni120
	$Pt1000\alpha = 0.00385$	$Pt1000\alpha = 0.00385$
	Cu100a=0.00421	$Cu100\alpha = 0.00421$
	Cu100a=0.00427	$Cu100\alpha = 0.00427$
	Cu1000a=0.00421	$Cu1000\alpha = 0.00421$
Sampling Rate	15 samples/sec at 60Hz	12 samples/sec
	12.5 samples/sec at 50Hz	
Bandwidth	15.7 Hz	5.24 Hz
Accuracy	±0.1%	$\pm 0.05\%$
Zero Drift	0.5 μV/°C	0.5 μV/°C
Span Drift	20 μV/°C	20 μV/°C
CMR@50/60Hz	150 dB min	150 dB min
NMR@50/60Hz	100 dB min	100 dB min
Isolation	3000 VDC	3000 VDC
Modbus RTU	EX-9033-M/33P-M	EX-9015-M/36-M/36P-M
Power		
Requirements	+10 to +30 VDC	+10 to +30 VDC
Consumption	1.0 W for	1.1 W
Temperature		
Range		
Operating	-25°C to +75°C	$-25^{\circ}C$ to $+75^{\circ}C$
Storage	-30°C to +75°C	-30°C to +75°C

Notes:

1. Warm-UP for 30 minutes is recommended!

1.2 Wire connection

1.2.1 Block Diagrams



1.2.2 Wiring diagram for the EX-9033/36/33P/36P/15





3-wire RTD connection





Note: Block diagram of EX-9033/33P/36/36P & EX-9015 from CD of EX9000 series or topsccc.com

1.2.3 Wiring Recommendations

- 1.For the EX-9033/36 and EX-9033P/36P,the wires of a channel should be shielded and the shielding should be connected to the A.GND terminal of the channel.
- 2.For the EX-9015, it is recommended to use shielded wire and connect the shielding to the IEXEC+ terminal of the channel.
- 3.For RS-485, use insulated and twisted pair 24 AWG wire, e.g. Belden 9841.
- 4.Use 26-12 AWG wire for signal connections.

1.3 Default Settings

Default settings for the EX-9033/33P/36/36P & EX9015 modules are as follows:

- . Module Address: 01
- . RTD Type: Type 20, Pt100, -100°C to 100°C
- . Baud Rate: 9600 bps
- . Checksum disabled
- . Engineering unit format
- . Filter set at 60Hz rejection

Default settings for the EX-9033-M/33P-M/36-M/36P-M & EX9015-M modules are as follows:

- . Protocol: Modbus RTU
- . Module Address: 01
- . RTD Type: Type 20, Pt100, -100°C to 100°C
- . Baud Rate: 9600 bps
- . Filter set at 60Hz rejection

1.4 Calibration(Warning: Pls don't calibrate before you really understand.)

Calibration sequence:

- 1. Install zero calibration resistor.
- 2. Warm up the module for at least 30 minutes.
- 3. Set the type code to the type you wish to calibrate.
- 4. Enable calibration.
- 5. Perform zero calibration command.
- 6. Install span calibration resistor.
- 7. Perform span calibration command.
- 8. Repeat steps 4 to 7 three times.

Notes:

- 1. Use the 2-wire RTD connection to connect the calibration resistor.
- 2. For the EX-9033/36, connect the calibration resistor to channel 0.
- 3. For the EX-9015, EX-9033P/36P each channel should be calibrated separately and only the channel being calibrated should be enabled during calibration.
- 4. Calibration resistors are shown on the follows.
- 5. The EX-9000 series modules must be switched to the Normal protocol mode before calibrating.

Calibration resistor types used by the EX-9033/33M/36/36M and EX-9033P/33PM/36P/36PM and EX9015/15M:

Туре	Zero Calibration Resistor	Span Calibration Resistor
20	0 Ohms	320 Ohms
2A/2D	0 Ohms	3000 Ohms

Types 21/22/23/24/25/26/27/28/29/2B/2C/2E/2F/80/81/82/83 same as type 20

1.5 Configuration Tables

Baud Rate Setting (CC)

Code	03	04	05	06	07	08	09	0A
Baud rate	1200	2400	4800	9600	19200	38400	57600	115200

RTD Type Setting (TT)

Type Code	Temperature Sensor Type	Temperature Range °C
20	Platinum 100, $\alpha = 0.00385$	-100 ~ 100
21	Platinum 100, $\alpha = 0.00385$	0 ~ 100
22	Platinum 100, $\alpha = 0.00385$	0 ~ 200
23	Platinum 100, $\alpha = 0.00385$	0 ~ 600
24	Platinum 100, $\alpha = 0.003916$	-100 ~ 100
25	Platinum 100, $\alpha = 0.003916$	0 ~ 100
26	Platinum 100, $\alpha = 0.003916$	0 ~ 200
27	Platinum 100, $\alpha = 0.003916$	0 ~ 600
28	Nickel 120	-80 ~ 100
29	Nickel 120	0 ~ 100
2A	Platinum 1000, $\alpha = 0.00385$	-200 ~ 600
2B	Cu 100 @ 0°C, α = 0.00421	-20 ~ 150
2C	Cu 100 @ 25°C, α = 0.00427	0 ~ 200
2D	Cu 1000 @ 0°C, α = 0.00421	-20 ~ 150
2E	Platinum 100, $\alpha = 0.00385$	-200 ~ 200
2F	Platinum 100, $\alpha = 0.003916$	-200 ~ 200
80	Platinum 100, $\alpha = 0.00385$	-200 ~ 600
81	Platinum 100, $\alpha = 0.003916$	-200 ~ 600
82	Cu 50 @ 0°C	-50 ~ 150
83	Nickel 100	-60 ~ 180

Data Format Setting (FF)

7	6	5	4	3	2	1	0
FS	CS		res	erved		DF	
Key DF	I	Description Data format					
		00: Engineering unit 01: % of FSR (full scale range) 10: 2's complement hexadecimal 11: Ohms					
CS		Checksum setting 0: Disabled 1: Enabled					
FS	H ((1	Filter set): 60Hz 1 l: 50Hz 1	ting rejectio rejectio	n n			

Note: The reserved bits should be zero.

•

RTD	Type	and	Data	Format	Tabl	e

Type Code	RTD Type	Data Format	+F.S.	-F.S.
	D1-time 100 a	Engineering unit	+100.00	-100.00
20		% of FSR	+100.00	-100.00
20	= 0.00385	2's comp HEX	7FFF	8000
	$-100 \sim 100^{\circ}C$	Ohms	+138.50	+060.60
	D1 (* 100	Engineering unit	+100.00	+000.00
21	Platinum 100 α	% of FSR	+100.00	+100.00
21	= 0.00385	2's comp HEX	7FFF	0000
	$0 \sim 100^{\circ} C$	Ohms	+138.50	+100.00
	Distingue 100 a	Engineering unit	+200.00	+000.00
22		% of FSR	+100.00	+000.00
22	= 0.00385	2's comp HEX	7FFF	0000
	$0 \sim 200^{\circ} C$	Ohms	+175.84	+100.00
	Distingue 100 a	Engineering unit	+600.00	+000.00
22		% of FSR	+100.00	+000.00
23	= 0.00385	2's comp HEX	7FFF	0000
	$0 \sim 600^{\circ} C$	Ohms	+313.59	+100.00
	Distingum 100 or	Engineering unit	+100.00	-1000.00
24	= 0.003916 -100 ~ 100°C	% of FSR	+100.00	-100.00
		2's comp HEX	7FFF	8000
		Ohms	+139.16	+060.60
	Distinum 100 or	Engineering unit	+100.00	+000.00
25	-0.002016	% of FSR	+100.00	+000.00
23	= 0.003916	2's comp HEX	7FFF	0000
	$0 \sim 100 \text{ C}$	Ohms	+139.16	+100.00
	Distinum 100 a	Engineering unit	+200.00	+000.00
26	-0.002016	% of FSR	+100.00	+000.00
20	-0.003910	2's comp HEX	7FFF	0000
	$0 \sim 200$ C	Ohms	+177.14	+100.00
	Platinum 100α	Engineering unit	+600.00	+000.00
27	-0.002016	% of FSR	+100.00	+000.00
21	-0.003910	2's comp HEX	7FFF	0000
	$0 \sim 000$ C	Ohms	+317.28	+100.00
		Engineering unit	+100.00	-080.00
28	Nickel 120	% of FSR	+100.00	-080.00
	-80 ~ 100°C	2's comp HEX	7FFF	999A
		Ohms	+200.64	+066.60
		Engineering unit	+100.00	+000.00
29	Nickel 120	% of FSR	+100.00	+000.00
29	$0 \sim 100^{\circ} \text{C}$	2's comp HEX	7FFF	0000
		Ohms	+200.64	+120.60

Type Code	RTD Type	Data Format	+F.S.	-F.S.
	D1-4	Engineering unit	+600.00	-200.00
2.4	Platinum 1000	% of FSR	+100.00	-033.33
2A	$\alpha = 0.00385$	2's comp HEX	7FFF	D556
	$-200 \sim 600^{\circ}$ C	Ohms	+3137.1	+0185.2
	C 100	Engineering unit	+150.00	-020.00
20	Cu 100	% of FSR	+100.00	-013.33
2B	$\alpha = 0.00421$	2's comp HEX	7FFF	EEEF
	$-20 \sim 150^{\circ}C$	Ohms	+163.17	+091.56
	C 100	Engineering unit	+200.00	+000.00
20	Cu 100	% of FSR	+100.00	+000.00
2C	$\alpha = 0.00427$	2's comp HEX	7FFF	0000
	$0 \sim 200^{\circ} C$	Ohms	+167.75	+090.34
	C 100	Engineering unit	+150.00	-020.00
20	CU 100	% of FSR	+100.00	-013.33
2D	$\alpha = 0.00421$	2's comp HEX	7FFF	EEEF
	$-20 \sim 150^{\circ}C$	Ohms	+1631.7	+0915.6
	D1-4	Engineering unit	+200.00	-200.00
25	= 0.00385 -200 ~ 200°C	% of FSR	+100.00	-100.00
2E		2's comp HEX	7FFF	8000
		Ohms	+175.84	+018.49
	Platinum 100 α = 0.003916	Engineering unit	+200.00	-200.00
		% of FSR	+100.00	-100.00
2F		2's comp HEX	7FFF	8000
	$-200 \sim 200^{\circ} \text{C}$	Ohms	+177.14	+017.14
	Distingue 100	Engineering unit	+600.00	-200.00
90	r = 0.00285	% of FSR	+100.00	-033.33
80	$\alpha = 0.00383$	2's comp HEX	7FFF	D556
	$-200 \sim 600$ °C	Ohms	+313.59	+018.49
	Distingum 100	Engineering unit	+600.00	-200.00
01	$\alpha = 0.002016$	% of FSR	+100.00	-033.33
81	u = 0.003910	2's comp HEX	7FFF	D556
	$-200 \sim 600$ °C	Ohms	+317.28	+017.14
		Engineering unit	+150.00	-050.00
02	Cu 50	% of FSR	+100.00	-033.33
82	-50 ~ 150°C	2's comp HEX	7FFF	D556
		Ohms	+082.13	+039.24
		Engineering unit	+180.00	-060.00
02	Nickel 100	% of FSR	+100.00	-033.33
0.0	-60 ~ 180°C	2's comp HEX	7FFF	D556
		Ohms	+223.10	+069.50

RTD Over Range/Under Range Reading

	Over Range	Under Range
Engineering Unit	+9999.9	-9999.9
% of FSR	+999.99	-999.99
2's Complement HEX	7FFF	8000

RTD Over Range/Under Range Reading for the EX-9015M and EX-9033M/33PM/36M with Modbus RTU Protocol

Over Range	Under Range
7FFFh	8000h

2.1 %AANNTTCCFF

Description: Set Module Configuration of an analog input Module.

Syntax: %AANNTTCCFF[CHK](cr)

- $\frac{1}{2}$ a delimiter character
- AA address of setting/response module(00 to FF)
- NN new address for setting/response module(00 to FF)
- TT new type code for EX9033/33M/36/36M parity type of EX9015/15M

00No parity10Even parity

EX9033P/33PM/36P/36PM fix to **00**

11 Odd parity

EX9033P/33PM/36P/36PM/15/15M are use the \$AA7CiRrr to set the type of each channel.(P28)

- CC baud rate code, The INIT* terminal must be connected to GND terminal in order to change Baud Rates.(P10)
- FF used to set the data format, checksum, and filter settings. The INIT* terminal must be connected to GND terminal in order to change the checksum setting. (P11)

Response: Valid Command:	!AA
Invalid Command:	?AA

Example:

Command :%0102240600 Receive:!02 Set module address 01 to 02, return Success.

2.2 #**

Description: Synchronized Sampling Syntax: #**[CHK](cr) # delimiter character ** synchronized sampling command

Response: No response

Example:

Command: #** No response Send synchronized sampling command to all modules.

Command: \$014 Receive: >011+051.23+041.53+072.34 Read synchronized data from address 01, return S=1, first read and data is +051.23+041.53+072.34

Command: \$014 Receive: >010+051.23+041.53+072.34 Read synchronized data from address 02, return S=0, have readed and data is +051.23+041.53+072.34

2.3 #AA

Description: Read Analog Input Syntax:#AA[CHK](cr)

delimiter character
AA address of reading/response module(00 to FF)
Response: Valid Command: >(Data)

(Data) analog input value for its format while use #AA command to EX9033/36/15, the data is the combination for each channel respectively.

Example :

Command: #04 Receive:>+051.23+041.53+072.34-023.56+100.00-051.33 The module address 04 is EX9036/15. Read address 04 for

The module address 04 is EX9036/15. Read address 04 for getting data of all 6 channels.

2.4 #AAN

Description : Read Analog Input from channel N **Syntax : #AAN[CHK](cr)**

delimiter character

AA address of reading/response module(00 to FF)

N channel to read, from 0 to 3/6

Response: Valid Command:>(Data)Invalid Command:?AA

(Data) analog input value for its format

Example :

Command : #032Receive : >+025.13Read address 03 channel 2, get data successfully.Command : #029Read address 02 channel 9, return error channel number.

2.5 \$AA0 (For EX9033/33M/36/36M)

Description: Perform Zero Calibration Syntax: \$AA0[CHK](cr)

- delimiter character \$
- address of setting/response module (00 to FF) AA
- command for performing zero calibration 0

Response:	Valid Command:	!AA
	Invalid Command:	?AA

Example :

Receive : 101

Command : \$010 Perform address 01 zero calibration on channel 0, return success.

Command : \$020 Receive : ?02 Perform address 02 zero calibration on channel 2, return not enable calibration before perform calibration command.

Warning: Pls don't calibrate before you really understand.

2.6 \$AA1 (For EX9033/33M/36/36M)

Description: Perform Span Calibration **Syntax: \$AA1[CHK](cr)**

\$	delimiter character	
AA	address of setting/response n	nodule (00 to FF)
1	command for performing spa	an calibration
Res	conse: Valid Command:	!AA
_	Invalid Command:	?AA

Example:

Command: \$011Receive: !01Perform address 01 span calibration on channel 0, returnsuccess.Command: \$021Receive: ?02Perform address 02 span calibration on channel 2, return notenable calibration before perform calibration command.

Warning: PIs don't calibrate before you really understand.

2.7 \$AA0Ci (For EX9033P/33PM/15/15M/36P/36PM)

Description: Perform zero calibration on the specified channel.

Syntax:\$AA0Ci[CHK](cr)

- \$ delimiter character
- AA address of setting/response module (00 to FF)
- 0 command for the zero calibration
- Ci specifies the channel to be calibrated (EX9033P/33PM: i=0~2, EX9036P/15/15M: i=0~5)

Response: Valid Command:

Invalid Command: **?AA**

Example:

Command :\$010C0

Receive : !01

!AA

Perform address 01 zero calibration on channel 0, return success.

Command : \$020C2

Receive : ?02

Perform address 02 zero calibration on channel 2, return not enable calibration before perform calibration command.

Note: This command must be sent before the "span calibration" command, \$AA1Ci, is used.

2.8 \$AA1Ci (For EX9033P/33PM/15/15M/36P/36PM)

Description: Perform span calibration on the specified channel.

Syntax:\$AA1Ci[CHK](cr)

- \$ delimiter character
- AA address of setting/response module (00 to FF)
- 1 command for performing span calibration
- Ci specifies the channel to be calibrated (EX9033P/33PM: i=0~2, EX9036P/15/15M: i=0~5)

Response: Valid Command:

Invalid Command: **?AA**

Example:

Command: \$011C0

Receive: !01

!AA

Perform address 01 span calibration on channel 0, return success.

Command: \$021C2

Receive: ?02

Perform address 02 span calibration on channel 2, return not enable calibration before perform calibration command.

2.9 \$AA2

Description: Read configuration. **Syntax:\$AA2[CHK](cr)**

- \$ delimiter character
- AA address of reading/response module(00 to FF)
- 2 command for read configuration
- **Response:** Valid Command:

!AATTCCFF ?AA

- TT type code of the module
- CC baud Rate code of the module
- FF data format, checksum settings and filter settings of the module

Invalid Command:

Example:

Command: \$012 Read the configuration of module 01. Receive: !01200600

Note: check configuration Tables

2.10 \$AA4

Description: Reads the synchronized data **Syntax:\$AA4[CHK](cr)**

- \$ delimiter character
- AA address of reading/response module(00 to FF)
- 4 command to read the synchronized data

Response: Valid Command:	>AAS(Data)
Invalid Command:	?AA

- S status of synchronized data, 1=first read, 0=been readed
- (Data) synchronized value

Example:

Command: \$014 Receive: ?01 Read address 01 synchronized data, return no data available. Command: #** Receive: no response Send synchronized sampling to all modules. Command: \$014 Receive:>011+051.23+041.53+072.34 Read address 01 synchronized data, return S=1, first read, and synchronized data +025.56

2.11 \$AA5

Description: Read Reset Status Syntax:\$AA5[CHK](cr)

- \$ delimiter character
- AA address of reading/response module(00 to FF)
- 5 command for read reset status

Response:	Valid Command:	!AAS
	Invalid Command:	?AA

S reset status, 1=the module is been reset, 0=the module is not been rested

Example:

Command: \$ 015Receive: !011Read address 01 reset status, return module is been resetCommand: \$ 015Read address 01 reset status, return no reset occurred.

2.12 \$AA5VV

Description: Set Channel Enable Syntax:\$AA5VV[CHK](cr)

\$ delimiter character

AA address of setting/response module (00 to FF)

- 5 command for set channel enable
- VV channel enable/disable, 00 is all disabled and FF is all enabled.

Response: Valid Command:	!AA
Invalid Command:	?AA

Example:

Command :\$0152A

Receive : !01

Set address 01 to enable channel 1,3,5 and disable channel 0,2,5 return success.

Command : \$016

Receive : !012A

Read address 01 channel status, return channel 1,3,5 are enabled and channel 0,2,4 are disabled.

2.13 \$AA6

Description: Read Channel Status Syntax: \$AA6[CHK](cr)

- \$ delimiter character
- AA address of reading/response module (00 to FF)
- 6 command for read channel status

Response:	Valid Command:	!AAVV
-	Invalid Command:	?AA

VV channel enable/disable, 00 is all disabled and FF is all enabled.

Example:

Command :\$0152AReceive : !01Set address 01 to enable channel 1,3,5 and disable channel0,2,4 return success.Command : \$016Receive : !012AReads Read address 01 channel status, return channel 1,3,5are enabled and channel 0,2,4 are disabled.

2.14 \$AA7CiRrr (For EX9033P/33PM/15/15M/36P/36PM)

Description: Sets the type code of a channel.

Syntax:\$AA7CiRrr[CHK](cr)

\$	delimiter character
AA	address of setting/response module(00 to FF)
7	set the channel range code

- Ci i specifies the input channel to be set (EX9033P/33PM: i=0~2, EX9036P/15/15M: i=0~5)
- Rrr rr represents the type code of the channel to be set.

Response: Valid comma nd:	!AA
Invalid command:	?AA

Example:

Command: \$017C0R20Receive: !01Sets the type code for channel 0 of module 01 to be $20 (PT100, -100 \sim +100^{\circ}C)$ and the module returns avalid response.Command: \$027C5R28Receive: !02Sets the type code for channel 5 of module 02 to be $28 (Ni120, -80 \sim +100^{\circ}C)$ and the module returns avalid response.Command: \$037C1R40Receive: ?03Sets the type code for channel 1 of module 03 to be

40. The module returns an invalid response because the type code is invalid.

2.15 \$AA8Ci (ForEX9033P/33PM/15/15M/36P/36PM)

Description:Reads the type code information of a channel. **Syntax:\$AA8Ci[CHK](cr)**

- \$ delimiter character
- AA address of reading/response module(00 to FF)
- 8 read the type code of a channel
- Ci specifies which channel to be access for the type code

(EX9033P/33PM: i=0~2, EX9036PM/15/15M: i=0~5)

Response:	Valid command:	!AACiRrr
	Invalid command:	?AA

- Ci specifies which channel to be access for the type code (EX9033P/33PM: i=0~2, EX9036P/15/15M: i=0~5)
- Rrr rr repesents the type code of the channel to be read

Example:

Command: 018C0 Receive: 01C0R20Reads the type(input range) of channel 0 of module 01 to be 20 (PT100, $-100 \sim +100^{\circ}$ C).

2.16 \$AAB

Description: Diagnoses the analog inputs for over-range, under-range, and wire opening conditions.

Syntax: \$AAB[CHK](cr)

\$ delimiter character
AA address of reading/response module (00 to FF)
B diagnose the analog inputs
Response: Valid command: !AANN
Invalid command: ?AA

NN represents the diagnostic results of all the analog input channels (00 to FF) where bit 0 relat to channel 0, bit 1 relat to channel 1, etc. When the bit is 1 and the channel is enabled and it is in either overrange, under-range or wire opening condition. If the bit is 0 and the channel is disabled or normal.

Example:

Command: \$01B Receive: !0101 Diagnoses the analog inputs of module 01. The module returns a valid response that channel 0 is in either over-range, under-range or wire opening condition.

2.17 \$AAF

Description: Read Firmware Version **Syntax:\$AAF[CHK](cr)**

\$ delimiter character

AA address of reading/response module(00 to FF)

F command for read firmware version

Response: Valid command:!AA(Data)Invalid command:?AA

(Data) Firmware version of module

Example:

Command : \$01FReceive : !01P1.1Read address 01 firmware version, return version P1.1.Command : \$01FRead address 01 firmware version, return version M1.1

2.18 \$AAM

Description:Read Module NameSyntax:\$AAM[CHK](cr)\$ delimiter characterAA address of reading/response module(00 to FF)M command for read module nameResponse: Valid command:!AA(Data)Invalid command:!AA

(Data) Name of module

Example:

Command : \$01MReceive : !019033Read address 01 module name, return name 9033.Command : \$03MReceive : !039036Read address 03 module name, return name 9036

2.19 \$AAP (For EX9033M/33PM/15M/36M/36PM)

Description:Read protocol information of Module **Syntax:**\$AAP[CHK](cr)

\$ delimiter character
 AA address of reading/response module(00 to FF)
 P command for read protocol information of module
 Response: Valid command: !AAS
 Invalid command: ?AA

S The protocol supported by the module

10: the protocol set in EEPROM is Normal mode

11: the protocol set in EEPROM is ModbusRTU mode

Example:

Command: \$01P Response: !0110 Reads the communication protocol of module 01 and returns a response of 10 meaning the protocol that will be used at the next power on reset is normal mode.

Command: \$01P1 Response: !01 Sets the communication protocol of module 01 to Modbus RTU and returns a valid response. And the next power on reset is in ModbusRTU mode.

2.20 \$AAPN (For EX9033M/33PM/15M/36M/36PM)

Description:Set the protocol information of Module **Syntax:**\$AAPN[CHK](cr)

- \$ delimiter character
- AA address of reading/response module(00 to FF)
- P command for read protocol information of module
- N The protocol supported by the module
 - 0: the protocol set in EEPROM is Normal mode
 - 1: the protocol set in EEPROM is ModbusRTU mode

!AA

Response: Valid command:

Invalid command: **?AA**

Example:

Command: \$01P1

Response: 101

Sets the communication protocol of module 01 to Modbus RTU and returns a valid response. And the next power on reset is in ModbusRTU mode.

2.21 \$AAS0 (For EX9015/15M)

Description:Perform an internal calibration **Syntax:\$AAS0[CHK](cr)**

\$ delimiter character

AA address of setting/response module(00 to FF)

S0 perform the internal calibration

Response: Valid command:		!AA
-	Invalid command:	?AA

Example:

Command: \$01S0

Receive: !01

Perform an internal calibration on module 01 and returns a valid response.

2.22 \$AAS1 (For EX9015/15M)

Description:Reload the factory default calibration parameters, including the internal calibration parameters. **Syntax:\$AAS1[CHK](cr)**

- \$ delimiter character
- AA address of setting/response module(00 to FF)
- S1 reload the factory default and internal calibration parameters

Response: Va	lid command:	!AA
In	valid command:	?AA

Example:

Command: \$01S1 Receive: !01 Reload the factory default calibration parameters for module 01 and returns a valid response.

2.23 ~AAEV

Description: Enable/Disable Calibration **Syntax:~AAEV[CHK](CR)**

~ delimiter character

AA address of setting/response module (00 to FF)

E command for enable/disable calibration

V 1=Enable/0=Disable calibration

Response: Valid Command:!AAInvalid Command:?AA

Example:

Command : \$010Receive: ?01Perform address 01 span calibration, return the command is
invalid before enable calibration.Receive: ?01Command : ~01E1Receive: !01Set address 01 to enable calibration, return success.Receive: !01Command: \$010Receive: !01Preform address 01 span calibration, return success.

Warning: Pls don't calibrate before you really understand.

2.24 ~AAO(Data)

Description:Set Module Name **Syntax:~AAO(Data)[CHK](cr)**

delimiter character
 AA address of setting/response module(00 to FF)
 O command for set module name
 (Data) new name for module, max 6 characters
 Response: Valid command: !AA
 Invalid command: ?AA

Example:

Command:~01O9033Receive :!01Set address 01 module name 9033, return success.Command : \$01MReceive : !019033Read address 01 module name, return name 9033.

2.25 ~**

Description: Host OK.

Host send this command to all modules for send the information "Host OK"

Syntax:~**[CHK](cr)

delimiter character
 ** command for all modules
 Response: No response.

Example:

Command: ~**

No response

2.26 ~AA0

Description: Read Module Host Watchdog Status. **Syntax:~AA0[CHK](cr)**

- ~ delimiter character
- AA address of reading/response module(00 to FF)
- 0 command for read module status

Response:	Valid command:	!AASS
	Invalid command:	?AA

SS module status, 00=host watchdog timeout status is clear,04=host watchdog timeout status is set that based on host watchdog is disabled if SS is 10 or 14 that based on host watchdog is enabled. The status will store into EEPROM and only may reset by the command~AA1.

2.27 ~AA1

Description: Reset Module Host Watchdog Status. **Syntax:~AA1[CHK](cr)**

~ delimiter character

AA address of setting/response module(00 to FF)

1 command for reset module status

Response:	Valid command:	!AA
	Invalid command:	?AA

2.28 ~AA2

Description: Read Host Watchdog Timeout Value **Syntax:~AA2[CHK](cr)**

- ~ delimiter character
- AA address of reading/response module(00 to FF)
- 2 command for read host watchdog timeout value

Response: Valid command :!AAEVVInvalid command:?AA

- E host watchdog enable status, 1=Enable, 0=Disable
- VV timeout value in HEX format, each count is 0.1 second 01=0.1 second and FF=25.5 seconds

2.29 ~AA3EVV

Description: Set Host Watchdog Timeout Value **Syntax:~AA3EVV[CHK](cr)**

~ delimiter character

AA address of setting/response module(00 to FF)

3 command for set host watchdog timeout value

E 1=Enable/0=Disable host watchdog

VV timeout value, from 01 to FF, each for 0.1 second

Response: Valid command: !AA

Invalid command: **?AA**

Example:

Command : ~ 010 Receive : 10100 Read address 01 modules status, return host watchdog timeout status is clear. Receive : !01 Command : ~013164 Set address 01 host watchdog timeout value 10.0 seconds and enable host watchdog, return success. Command : ~012 Receive : 101164 Read address 01 host watchdog timeout value, return that host watchdog is enabled, and time interval is 10.0 seconds. Command : ~** No response Reset the host watchdog timer. Wait for about 10 seconds and don't send command \sim **, the LED of module will go to flash. The flash LED indicates the host watchdog timeout status is set. Command : ~010 Receive · 10104 Read address 01 module status, return host watchdog timeout status is set. Receive : !01064 Command : ~ 012 Read address 01 host watchdog timeout value, return that

host watchdog is disabled, and time interval is 10.0 seconds.

Command : ~011Receive : !01Reset address 01 host watchdog timeout status, returnsuccess And the LED of this module stop flash.Command : ~010Receive : !0100Read address 01 module status, return host watchdogtimeout status is clear.

EX9033M/33PM/36M/36PM/15M Quick Start

- 1. The default setting is MODBUS mode after Power On .
- 2. Using INIT pin to contact with GND pin then Power On will enter Normal mode.
- 3. Command: \$00P0 is set EX9036-M to Normal mode after Repower On. On normal mode, user can set other setting like address, Baudrate, (Please check the EX9000 user manual).
- 4. Command: \$AAP1 is set to MODBUS mode after Repower On .
- 5. Under Normal mode that Command: \$AAP can check which mode it is after Repower On . response: !AA10 = Normal !AA11 = MODBUS
- 6. 04(0x4) READ INPUT CHANNELS

This function code is used to read from 1 to 3(EX9033M/33PM), 1 to 6(EX9015M/36M/36PM) continuous analog input channels.

Request

00	Address	1Byte	1 to 247
01	Function code	1Byete	0x04
02-03	Starting channel	2 Bytes	0 to 2 for reading analog inputs (EX9033M/33PM)
			0 to 5 for reading analog inputs (EX9015M/36M/36PM)
04-05	Number of input Channels(N)	2Bytes	1 to 6;(Starting channel+N)<=3 (EX9033M/33PM)
			1 to 6;(Starting channel+N)<=6 (EX9015M/36M/36PM)
			for reading analog inputs

Response

response					
00	Address	1Byte	1 to 247		
01	Function code	1Byete	0x04		
02	Byte count	1 Byte	2 x N		
03~	Data of input	2 x N			
	channels	Bytes			

Error Response

00	Address	1Byte	1 to 247
01	Function code	1Byete	0x84
	Exception code	1 Byte	02:starting channel out of range
			03:(starting channel+number of input channels) out
			of range, incorrect mumber of bytes received